# How to use the Deltavision analysis computer

30 April 2015

#### Important notes

- 1. Login to this analysis PC is the same as what you use to access to the microscope;
- 2. Leave this computer on <u>all the time</u>! Never shut it down as daily data transfer happens from the operational computer to the analysis PC;
- 3. "Data 1" is the only place where you can save your data on this local computer. DO NOT save images to "Home" nor "Data 2" because this will slow down analysis speed on this computer and data acquisition on the operational PC;
- 4. All DVD burning, data analysis and transfers onto AD server or other permanent storage must be done offline with the Deltavision analysis computer.

# Data management policy

- 1. The network connection between the microscope computer, analysis computer and the AD server is illustrated in the diagram below;
- Data acquired with DeltaVision Core microscope must be stored onto the folder: "devices\hard disc (sda2)\data1\folder in your own name". An <u>auto data transferring</u> program is running to move your data to the analysis computer <u>daily at midnight</u>. Images can only be stored on this operational PC for <u>ONE week of use</u>. Anything older than one week will be deleted automatically;
- 3. Files stored on the analysis computer will be deleted automatically after **FOUR weeks** of storage;
- 4. Analysed images can be saved to WMI AD server for up to <u>THREE months</u>. Users are advised to move your data to other permanent storage before it gets deleted without notice.
- 5. It is the <u>researcher's responsibility</u> to ensure the timely back up of their imaging data on both microscope operating and analysis computers as well as on the AD server.



# How to access your data stored on the analysis PC

30 April 2015

### Way 1—access from file browser (in this case called "dolphin")

1. After login, you will have the following window on your desktop. Click on "Home"



2. Click on "Root" in dolphin window then "data1" to access to the data saved on the local computer or "wmifs01" to access WMI AD server.

🗃 🕥 / - Dolphin					$\odot$	
File Edit View Go Tools S	ettings Help				0.	
🔶 🔶 📰 📰	m 💌 t	Search				a
Back Forward Icons Details C	olumns Preview S	plit				
Places	Root				Information	• *
	Name	<b>v</b> .	Size	Date	Root	
Home  Home  Koot  Kab data project	🚞 bin		128 items	2015-04-17 11:55		
	🚞 boot 👖		15 items	2015-03-24 02:33		
	cgroup V		0 items	2014-10-18 10:12		
	data1 Your	data is saved here!	64 items	2015-04-29 11:03		
	data2	"data 2 is the operational PC. Do not try to access	60 items	2015-04-29 11:03		
	🚞 dev	your original data from here as this will slow down	451 items	2015-04-30 10:06		_
	etc 📄	other user's acquisition!	272 items	2015-04-29 15:41		
	home	"Heme" is where program files are Do not save	81 items	2015-04-29 12:53	Modified: 2015-04-2 11:13 Type: Folder	-04-29
	📄 lib	Home is where program lies are. Do not save	114 items	2015-04-17 11:54		er
	🚞 lib64	data nere!	247 items	2015-04-17 11:54		
	🚞 lost+found			2015-03-20 20:03		
	🚞 media		5 items	2015-04-29 15:41		
	isc 🚞 🚞		0 items	2015-04-29 10:45		
	🚞 mnt		0 items	2011-09-23 21:50		
	🚞 net		0 items	2015-04-29 10:45		
	MVIDIA		2 items	2015-03-24 02:33		
	e opt		2 items	2015-03-21 05:50		
Volume (vfat)	🚞 proc		256 items	2015-04-29 10:44		
	i root			2015-04-29 15:14		
	🚞 sbin		292 items	2015-04-17 11:54		
٨	i selinux		23 items	2015-04-29 10:44		
Ĥ	i srv		0 items	2011-09-23 21:50		
	🚞 sys		11 items	2015-04-29 10:44		
U	🚞 tmp		29 items	2015-04-30 10:00		
access to LICD drive	🚞 usr	This is the Deliver in the AD and Mark	12 items	2015-03-20 20:06		
	🚞 var	This is the Deltavision drive on the AD server. You	22 items	2015-03-20 20:14		
	📄 wmifs01 🛛 🔫	can manually transfer your analysed data to here.	22 items	2015-04-29 15:59		

### How to access your data stored on the analysis PC

30 April 2015

#### Way 2—access from softWorx

After login, follow the steps shown in the below images.



3. Click on "Root" in dolphin window then "data1" to access to the data saved on the local computer or "wmifs01" to access WMI AD server.